

## CONVERSION INSTRUCTIONS CONTROL BOX TYPE 2100 TO TYPE 2200 or TYPE 2300


The following conditions must be fulfilled before a change-over from the control "Type 2100" to the control "Type 2200" or "Type 2300".




Take notice of the safety instructions in the operating and installation manual Type 2200 or Type 2300 before starting.

1. disconnection of the equipment
2. loosening of the wirings
3. dismantling of the control box Type 2100
4. mounting of the control box Type 2200 or Type 2300
5. power supply directly connected to main switch
6. motor connection directly connected to power contactor for motor
7. connect the remaining wiring to the terminal strip → see wiring diagrams
8. rewiring of the differential pressure indicator due to broken wire monitoring → see photos (change over from 3 → 3a)
9. adjustment of the control voltage and power supply at the transformer according to customer requirements
10. starting of the equipment
11. conducting of the new parameter-adjustment

### Wiring of the differential pressure indicator

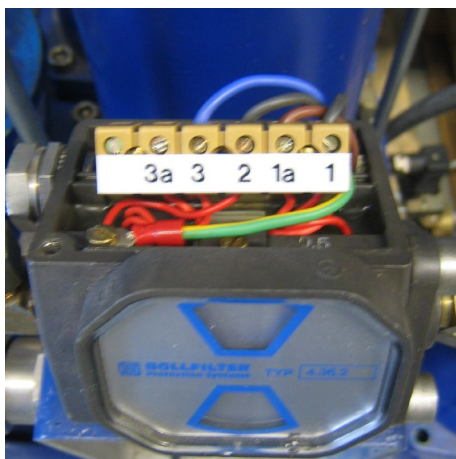

Type 2100

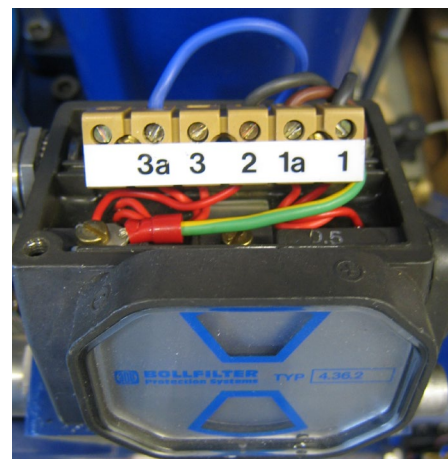

Type 2200 or Type 2300